
ACCESSORIES

ATTACHMENT

The Modular Bungee Shroud and Rear Exterior VELCRO® provide convenient and secure ways to attach and detach various accessories to different positions, allowing for personalized customization.

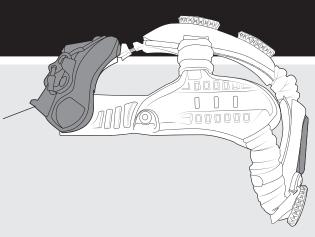




Rear Exterior

VELCRO® &

and Battery Packs

Mounting

Plate for Counterweights

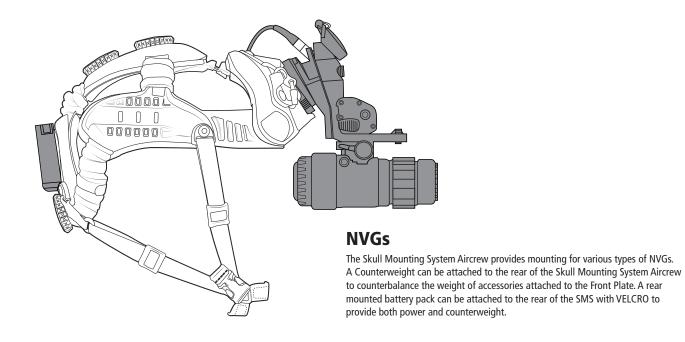

GENTEX CORPORATION LIMITED WARRANTY

Unless an individual product is covered by a separately issued warranty, Gentex warrants that all ballistic helmet shells will be free from defects in material or workmanship under normal use and service for a period of five (5) years from the date of delivery. Unless an individual product is covered by a separately issued warranty, Gentex warrants that all helmet components, accessories, peripherals, and parts will be free from defects in material or workmanship under normal use and service for a period one (1) year from the date of delivery. All repair covered by this warranty shall be performed at Gentex's factory, or other such warranty repair facilities of Gentex as designated by Gentex unless Gentex specifically directs that repair services be performed at another location. Any defect corrected and found to be within this scope of the warranty will be repaired by Gentex and all charges for labor and material will be borne by Gentex. If it is determined that either no fault exists in Gentex, or the damage to be repaired was caused by negligence of the user, its agents, employees or customers, you agree to pay all charges associated with each such repair. No statement, recommendation or assistance made or offered by Gentex through its representatives to the user, its agents, employees, or customers in connection with the purpose or intended use of any Gentex's product shall be or constitute a waiver by Gentex of any of the provisions of this warranty or change Gentex's liability under this warranty.

EXCEPT WHERE PROHIBITED BY LAW, THE WARRANTY DESCRIBED ABOVE CONSTITUTES THE SOLE WARRANTY MADE BY GENTEX EITHER EXPRESSED OR IMPLIED. THERE ARE NO OTHER WARRANTIES EXPRESSED OR IMPLIED THAT EXTEND BEYOND THE FACE HEREOF, HEREIN, INCLUDIONE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL GENTEX BE LIABLE FOR ANY INCIDIONTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES EVEN IF ADVISED OF SUCH DAMAGES. AND THE USER, ITS AGENTS, EMPLOYEES, OR CUSTOMERS REMEDIES SHALL BE LIMITED TO SOLEY TO THE REPAIR OR REPLACEMENT OF NONCONFORMING UNITS OR PARTS, WHICH AMOUNT SHALL NOT EXCEED THE TOTAL PURCHASE PRICE OF THE PRODUCT UNDERWARRANTY.

Any tampering, misuse or negligence in handling or use of the product renders the warranty void. Further, the warranty is void if, at any time, the user, its agents, employees or customers attempts to make any internal changes to any of the components of a product; if at any time the power supplied to any part of the product exceeds the rated tolerance; if any external device attached by the user, its agents, employees or customers creates conditions exceeding the tolerance of the product; or if any time the serial number plate is removed or defaced. OPERATION OF THE PRODUCTS THAT RENDERS THIS WARRANTY VOID WILL BE DEFINED TO INCLUDE ALL OF THE POSSIBILITIES DESCRIBED IN THIS SECTION, TOGETHER WITH ANY PRACTICE THAT RESULTS IN CONDITIONS EXCEEDING THE DESIGN TOLERANCE OF THE PRODUCTS.

AWARNING

The Skull Mounting System Aircrew does not provide any type of protection for the head and does not offer any protection against neck, spinal, or brain injuries including those caused by rotational forces. Inspect the Skull Mounting System Aircrew before each use. Make sure the adjustment dials, plastic hardware, stitching, chinstrap, and fit system components are not damaged, cracked, deformed, loose or showing signs of excessive wear. If they do, replace them or the Skull Mounting System Aircrew.

www.ops-core.com



SKULL MOUNTING SYSTEM AIRCREW

OPERATOR'S MANUAL



KIT INCLUDES:

(1) Skull Mounting System Aircrew equipped with (1) ½" Front Pad , (1) ¼" Top Pad, (1) ¼" Rear Pad, (1) ¼" Left Side Pad, (1) ¼" Right Side Pad; and additional (1) ½" Rear, (1) ½" Left Side, and (1) ½" Right Side Pads

This product is covered by one or more patents. For more information visit **www.gentexcorp.com/patents**

A15369-1

© 2024 Gentex Corporation. Ops-Core is a registered trademark of Gentex Corporation or its affiliates. VELCRO® is a registered trademark of Velcro BVBA.

INTRODUCTION

SCAN THE CODE

LEARN MORE

Modular


Bungee

ABOUT YOUR SKULL MOUNTING SYSTEM AIRCREW

This manual covers the basic operating and fitting instructions for the Ops-Core Skull Mounting System Aircrew. The Skull Mounting System Aircrew is a multi-purpose headgear integration device that is compatible with a variety of attachments. The three dial adjustment system accommodates a full range of head shapes and sizes.



The Skull Mounting System Aircrew is designed to fit the majority of head sizes. However, some users with smaller head sizes may find the thin pads to result in a loose fit. If this occurs, replace the back and side pads with the thicker comfort pads shown in dark grey.

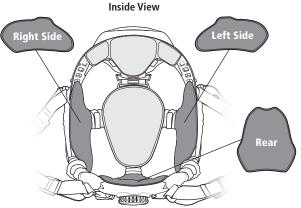



Adjustment Dial

COUNTERWEIGHT KIT (OPTIONAL)

Kit includes (1) Small and (1) Large Counterweight with corresponding hardware.








COUNTERWEIGHT ATTACHMENT

NOTE: ONLY ATTACH A COUNTERWEIGHT IF YOU NEED TO COUNTERBALANCE AN ATTACHMENT AT THE FRONT OF THE SKULL MOUNTINGH SYSTEM.

Align Counterweight holes to the holes on the back of the Skull Mounting System. Hold Counterweight in place and use your fingers to loosely attach a screw through the Counterweight and Skull Mounting System. Repeat for the remaining 2 holes.

Finish by using a screwdriver to tighten all 3 screws from the outside of the Counterweight, making sure the Counterweight is securely fastened to the Skull Mounting System.




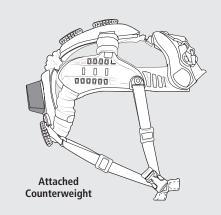

FIT & ADJUSTMENT

SKULL MOUNTING SYSTEM SETUP


- Turn Adjustment Dials counterclockwise (left) to make sure the Skull Mounting System is fully open.
- Place open Skull Mounting System on your head so that the Universal Front Plate is centered over the bridge of your nose. Begin adjustment by firmly pressing down on the top of the Universal Front Plate while tightening the Rear Adjustment Dial (turn clockwise to tighten).
- The distance from the top of the eyebrow to the bottom of the Skull Mounting System should be approximately 0.5" 1" as shown. The bottom of the Rear Pad should rest above nape of the neck. The side rails should be approximately paralell to the ground.

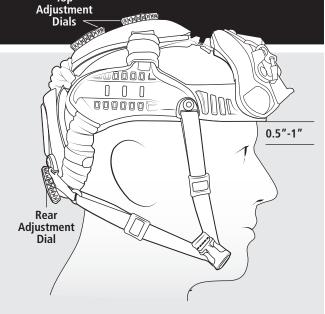



TIGHTEN

(Skull Mounting System Aircrew Fully Closed)
TURN DIALS CLOCKWISE TO TIGHTEN

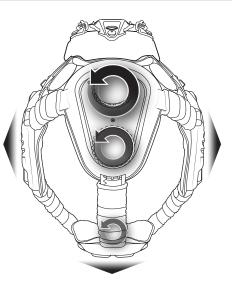

LOOSEN


(Skull Mounting System Aircrew Fully Open)
TURN DIALS COUNTERCLOCKWISE TO LOOSEN


FIT DIAL OPERATION

- Proceed to tighten the front and rear Top Adjustment Dials until the Skull Mounting System Aircrew fits securely on head. Readjust dials as desired to achieve comfortable fit and positioning.
- Once the front and rear Top Adjustment Dials are set, the Rear Adjustment Dial may need to be tightened again.

3 CHINSTRAP OPERATION

- Fasten the Chinstrap Buckle. With both hands, pull the two Rear Head-Loc Sliders on the lower webbing straps toward your chin until snug.
- With both hands, pull the two Front Head-Loc Sliders on the webbing straps that come from the front temples of the Skull Mounting System Aircrew toward your chin until snug.

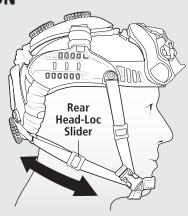

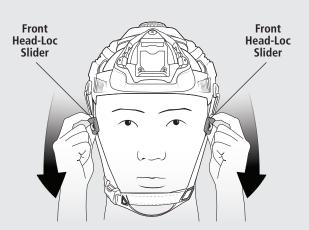

DO NOT PRINT THIS PAGE

SKULL MOUNTING SYSTEM AIRCREW OPERATOR'S MANUAL

A15369-1

PRINTER NOTES	
CLIENT: Gentex Corporation	
SIZE: 8.5" X 11" (finished)	
COLORS: 1-clr (black/gray)	
STOCK: 80# White Text	
PAGES: Single Page (11 x 17") Folded to 8.5 x 11"	
DATA: High Res PDF file	
PROOF: PDF Softproof	
FINISHING: Fold to 8.5 x 11"	

DO NOT PRINT THIS PAGE